



**Versatile
applications**
in medicine,
business and
industry

distyNotruf^{pro}

The life guard on the arm.



- **DECT-/GAP- telephone accessory**
- **Alarmserver suitable**
- **With acceleration sensor**

**Certified
Product**



Made in Germany

www.disty.de

distyNotruf^{pro} reports emergencies by acceleration sensor or keystroke (DECT/GAP) for a faster and more efficient communication in exigencies.



distyNotruf^{pro}

The helper in emergency situations

- Emergency situations are reported by acceleration sensor or keystroke
- Safe communication in case of alarm
- Quick and efficient assistance at the push of the button
- DECT technology ensures communication at any time between transmitter and up to 5 receivers
- Tough IP65 housing ensures availability even in extreme situations (water- and dust-tight, shock-resistant)



distyNotruf^{pro}

The direct connection to the server* or to a central location by keystroke

- Injured or needy persons can communicate **reliable and fast** with one central location by keystroke.
- The **acceleration sensor** can be configured so that the connection starts automatically after a preset time in which no motion has been detected.



By keystroke

- ◆ Raise an alarm
- ◆ Hear and speak
 - ◆ Accept incoming calls



distyNotruf^{pro} Other fields of application in economy

- In the case of company visits the guests can be equipped with the **distyNotruf^{pro}** to communicate and thus to ensure safety.
- In large shopping centers the system of **distyNotruf^{pro}** ensures a good accessibility of the employees.
- Individual workstations equipped with the **distyNotruf^{pro}** are gaining in comfort.



distyNotruf^{pro} Other fields of application in health care

- The **distyNotruf^{pro}** finds its use, for example, in psychiatric institutions, in order to secure the staff in case of an overlap.
- Beds in makeshift medical camps, for example in areas of conflict, can quickly and wirelessly equipped with the **distyNotruf^{pro}** (for example for the **emergency nurse call**).
- Vulnerable persons or those in need of help in private households can use the **distyNotruf^{pro}** to call for help in case of emergency quickly as well.



distyNotruf^{pro}

**Also usable as a telephone
with hands-free function**


- Answer calls with one button
- Water-jet-proof
- Shockproof



distyNotruf^{pro}

Technical Details

- DECT-GAP, EN 300 444
- Compatible with all consumer DECT/GAP base stations
- Compatible with all professional DECT systems
- Compatible with FRITZ!Box and Speedport Neo
- Speaker | Microphone
- Motion sensor
- Supports a variety of protocols used by manufacturers of alarm servers, including Ascom, NewVoice, TeMeNo, Novalink
- Running Time: > 120 Std | Talk Time: > 4 Std.
- Charge, programming inductive
- LED power indicator (in two colours)
- Button for distress calls and operation
- Lithium-Ion battery, capacity: 450 mAh
- Operating ambient temperature: -10 °C to 40 °C
- Storage temperature: -10 °C to 60 °C
- Plastic enclosure: 56 x 42 x 14 mm
- Protection class IP65
- Weight: approx. 29 g

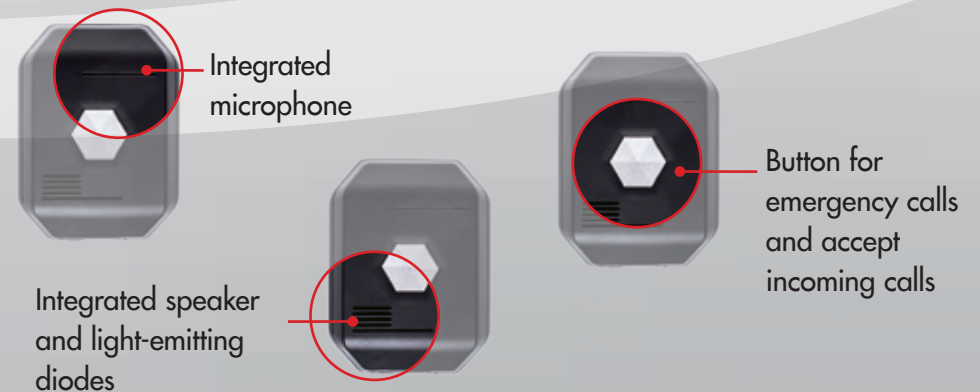

distyNotruf^{pro}

Wearing versions

- **Option 1:** Tied around the wrist
- **Option 2:** Fixing with the clip
- **Option 3:** Fastening with the collar



distyNotruf^{pro} Commissioning

- 1. Charge
- 2. Subscribe
- 3. Store numbers
- 4. **distyNotruf^{pro}** is now operational



Scope of delivery



Charging cable



Collar



Belt clip



distyNotruf^{pro} with bracelet



User brief instruction

distyNotruf^{pro} Optional available

The **disty**Programmieradapter

The first alarm number can be saved using the CLIP function. The **disty**Programmieradapter is required to store additional numbers. With the aid of the **disty**Programmer app, which is available on the website www.disty.de, the possible four remaining call numbers can be stored.





Mat.-No.: 5000347, EAN 4260047840274
All rights to changes reserved.



Servicehotline
+49 (0)431 · 3 64 58 22



disty communications GmbH
Holzkoppelweg 14 · D-24118 Kiel
Phone +49 (0)431 · 3 64 58 01
www.disty.de